
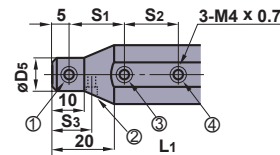
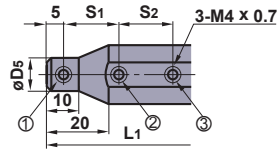


# РАСТОЧНОЙ ИНСТРУМЕНТ

## ДЕРЖАВКИ ДЛЯ MICRO-MINI / MICRO-MINI TWIN

### ДЕРЖАВКА КРУГЛОГО ТИПА

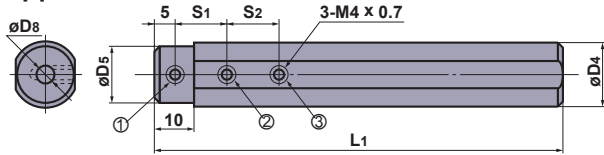

RBH158<sup>○</sup>N, RBH16<sup>○</sup>N, RBH190<sup>○</sup>N

RBH20<sup>○</sup>N, RBH25<sup>○</sup>N, RBH254<sup>○</sup>N

RBH22<sup>○</sup>N

Обозначение	Наличие	Размеры (мм)							Micro-Mini C	Micro-Mini Twin		*1 Крепежный винт				Ключ	Крутящий момент (Н•м)
		D4	D8	D5	L1	S1	S2	S3		CB	CR	①	②	③	④		
RBH15820N	★	15.875	2	15	100	10	—	—	—	—	—	B	B	—	—	HKY20F	2.0
15830N	★	15.875	3	15	100	10	10	—	03FR-BLS	03RS-01(B)	03RS-01(B)	A	A	A	—	HKY20F	2.0
15840N	★	15.875	4	15	100	15	15	—	04FR-BLS	04RS-01(B)	04RS-01(B)	A	A	A	—	HKY20F	2.0
15850N	★	15.875	5	15	100	15	15	—	05HR-BLS	05RS-01(B)	05RS-01(B)	A	A	A	—	HKY20F	2.0
15860N	★	15.875	6	15	100	15	15	—	—	—	—	A	A	A	—	HKY20F	2.0
15870N	★	15.875	7	15	100	20	20	—	—	—	—	A	A	A	—	HKY20F	2.0
15880N	★	15.875	8	15	100	20	20	—	—	—	—	D	D	D	—	HKY20F	2.0
RBH1620N	●	16	2	15	100	10	—	—	—	—	—	B	B	—	—	HKY20F	2.0
1630N	●	16	3	15	100	10	10	—	03FR-BLS	03RS-01(B)	03RS-01(B)	A	A	A	—	HKY20F	2.0
1640N	●	16	4	15	100	15	15	—	04FR-BLS	04RS-01(B)	04RS-01(B)	A	A	A	—	HKY20F	2.0
1650N	●	16	5	15	100	15	15	—	05HR-BLS	05RS-01(B)	05RS-01(B)	A	A	A	—	HKY20F	2.0
1660N	●	16	6	15	100	15	15	—	—	—	—	A	A	A	—	HKY20F	2.0
1670N	●	16	7	15	100	20	20	—	—	—	—	A	A	A	—	HKY20F	2.0
1680N	★	16	8	15	100	20	20	—	—	—	—	D	D	D	—	HKY20F	2.0
*2 RBH19020N	★	19.05	2	18	125	10	—	—	—	—	—	C	C	—	—	HKY20F	2.0
*2 19030N	★	19.05	3	18	125	10	10	—	03FR-BLS	03RS-01(B)	03RS-01(B)	B	B	B	—	HKY20F	2.0
*2 19040N	★	19.05	4	18	125	15	15	—	04FR-BLS	04RS-01(B)	04RS-01(B)	B	B	B	—	HKY20F	2.0
*2 19050N	★	19.05	5	18	125	15	15	—	05HR-BLS	05RS-01(B)	05RS-01(B)	B	B	B	—	HKY20F	2.0
*2 19060N	★	19.05	6	18	125	15	15	—	—	—	—	B	B	B	—	HKY20F	2.0
*2 19070N	★	19.05	7	18	125	20	20	—	—	—	—	B	B	B	—	HKY20F	2.0
*2 19080N	★	19.05	8	18	125	20	20	—	—	—	—	A	A	A	—	HKY20F	2.0
RBH2020N	★	20	2	11	125	10	—	—	—	—	—	A	A	—	—	HKY20F	2.0
2030N	★	20	3	12	125	10	10	—	03FR-BLS	03RS-01(B)	03RS-01(B)	A	A	B	—	HKY20F	2.0
2040N	★	20	4	13	125	15	15	—	04FR-BLS	04RS-01(B)	04RS-01(B)	A	B	B	—	HKY20F	2.0
2050N	★	20	5	14	125	15	15	—	05HR-BLS	05RS-01(B)	05RS-01(B)	A	B	B	—	HKY20F	2.0
2060N	★	20	6	15	125	15	15	—	—	—	—	A	B	B	—	HKY20F	2.0
2070N	★	20	7	16	125	20	20	—	—	—	—	A	B	B	—	HKY20F	2.0
2080N	★	20	8	17	125	20	20	—	—	—	—	A	A	A	—	HKY20F	2.0
RBH2220N	★	22	2	11	125	10	—	10	—	—	—	A	B	—	A	HKY20F	2.0
2230N	★	22	3	12	125	10	10	10	03FR-BLS	03RS-01(B)	03RS-01(B)	A	B	C	A	HKY20F	2.0
2240N	★	22	4	13	125	15	15	12.5	04FR-BLS	04RS-01(B)	04RS-01(B)	A	B	B	A	HKY20F	2.0
2250N	★	22	5	14	125	15	15	12.5	05HR-BLS	05RS-01(B)	05RS-01(B)	A	B	B	A	HKY20F	2.0
2260N	★	22	6	15	125	15	15	15	—	—	—	A	B	B	A	HKY20F	2.0
2270N	★	22	7	16	125	20	20	15	—	—	—	A	B	B	A	HKY20F	2.0
2280N	★	22	8	17	125	20	20	15	—	—	—	A	B	B	A	HKY20F	2.0
RBH2520N	★	25	2	11	150	10	—	—	—	—	—	A	B	—	—	HKY20F	2.0
2530N	★	25	3	12	150	10	10	—	03FR-BLS	03RS-01(B)	03RS-01(B)	A	B	C	—	HKY20F	2.0
2540N	★	25	4	13	150	15	15	—	04FR-BLS	04RS-01(B)	04RS-01(B)	A	C	C	—	HKY20F	2.0
2550N	★	25	5	14	150	15	15	—	05HR-BLS	05RS-01(B)	05RS-01(B)	A	C	C	—	HKY20F	2.0
2560N	★	25	6	15	150	15	15	—	—	—	—	A	C	C	—	HKY20F	2.0
2570N	★	25	7	16	150	20	20	—	—	—	—	A	C	C	—	HKY20F	2.0
2580N	★	25	8	17	150	20	20	—	—	—	—	A	B	B	—	HKY20F	2.0
RBH25420N	★	25.4	2	11	150	10	—	—	—	—	—	A	B	—	—	HKY20F	2.0
25430N	★	25.4	3	12	150	10	10	—	03FR-BLS	03RS-01(B)	03RS-01(B)	A	B	C	—	HKY20F	2.0
25440N	★	25.4	4	13	150	15	15	—	04FR-BLS	04RS-01(B)	04RS-01(B)	A	C	C	—	HKY20F	2.0
25450N	★	25.4	5	14	150	15	15	—	05HR-BLS	05RS-01(B)	05RS-01(B)	A	C	C	—	HKY20F	2.0
25460N	★	25.4	6	15	150	15	15	—	—	—	—	A	C	C	—	HKY20F	2.0
25470N	★	25.4	7	16	150	20	20	—	—	—	—	A	C	C	—	HKY20F	2.0
25480N	★	25.4	8	17	150	20	20	—	—	—	—	A	B	B	—	HKY20F	2.0

\*1 Порядковый номер зажимного винта A=HSS04004, B=HSS04006, C=HSS04008, D=HSS04003 \*2 Измененный номер заказа.

Обычный номер заказа	Измененный номер заказа	Обычный номер заказа	Измененный номер заказа
RBH1920N	RBH19020N	RBH1950N	RBH19050N
1930N	19030N	1960N	19060N
1940N	19040N	1970N	19070N

● : Есть на складе. ★ : Со склада в Японии.