



SCREW-IN TYPE

Right hand tool holder only.

R (mm)	Order Number	Stock R	Number of Teeth	Dimensions (mm)												
				D1	D6	L1	L2	D4	D5	M	ap	H1	Clamp Screw	Clamp Screw	Wrench	Insert
2.5	RRD025R102M5-B20	●	2	10	5	35	20	5.5	9.9	M5	2.5	6	B-TS20	—	TKY06F	RDH/Z 0501M0
	123M8-B20	●	3	12	7	38	20	8.5	13.5	M8	2.5	9	B-TS20	—	TKY06F	
	154M8-B20	●	4	15	10	38	20	8.5	13.5	M8	2.5	10	B-TS20	—	TKY06F	
	205M10-B20	●	5	20	15	44	25	10.5	18	M10	2.5	15	B-TS20	—	TKY06F	
3.5	RRD035R 122M8	●	2	12	5	46	28	8.5	13.5	M8	3.5	9	B-TS253	—	TKY08F	RDH/M/Z 07T1M0
	153M8	●	3	15	8	46	28	8.5	13.5	M8	3.5	10	TS253	—	TKY08F	
	204M10	●	4	20	13	47	28	10.5	18	M10	3.5	15	TS253	—	TKY08F	
	255M12	●	5	25	18	50	28	12.5	21	M12	3.5	17	TS253	—	TKY08F	
	306M16	●	6	30	23	51	28	17	29	M16	3.5	22	TS253	—	TKY08F	
	357M16	●	7	35	28	51	28	17	29	M16	3.5	22	TS253	—	TKY08F	
3.5	RRD035R 152M8	●	2	15	8	46	28	8.5	13.5	M8	3.5	10	TS25	—	TKY08F	RDH/M/Z 0702M0
	153M8X	●	3	15	8	43	28	8.5	13.5	M8	3.5	10	TS25	—	TKY08F	
5	RRD050R 202M10	●	2	20	10	47	28	10.5	18	M10	5.0	15	B-TS35	—	TKY15F	RDH/M/Z 1003M0
	252M12	●	2	25	15	54	32	12.5	21	M12	5.0	17	B-TS35	—	TKY15F	
	253M12	●	3	25	15	54	32	12.5	21	M12	5.0	17	B-TS35	—	TKY15F	
	304M12	●	4	30	20	54	32	12.5	21	M12	5.0	17	B-TS35	—	TKY15F	
	304M16	●	4	30	20	55	32	17	29	M16	5.0	22	B-TS35	—	TKY15F	
	355M16	●	5	35	25	65	42	17	29	M16	5.0	22	B-TS35	—	TKY15F	
	426M16	●	6	42	32	65	42	17	29	M16	5.0	22	B-TS35	—	TKY15F	
6	RRD060R 242M12	●	2	24	12	54	32	12.5	21	M12	6.0	17	B-TS35	—	TKY15F	RDH/M/Z 12T3M0
	353M16	●	3	35	23	65	42	17	29	M16	6.0	22	B-TS35	TS1001	TKY15F	
	354M16	●	4	35	23	65	42	17	29	M16	6.0	22	B-TS35	TS1001	TKY15F	
	424M16	●	4	42	30	55	32	17	29	M16	6.0	24	B-TS35	TS1001	TKY15F	
	425M16	●	5	42	30	65	42	17	29	M16	6.0	22	B-TS35	TS1001	TKY15F	
8	RRD080R 322M16	●	2	32	16	65	42	17	29	M16	8.0	22	214	—	TKY20F	RDH/M/Z 1604M0

(Note) For screw-in type arbors, refer to page K118—K119.

INSERTS	➤ J025, J026
SCREW-IN ARBORS	➤ K118
SPARE PARTS	➤ M001
TECHNICAL DATA	➤ N001