

HOW TO SELECT GY SERIES


STEP 1 SELECT AN APPLICATION

1 Select the application and the direction of the workpiece rotation, then follow the next steps.


Normal use

Clockwise

Reverse holder use

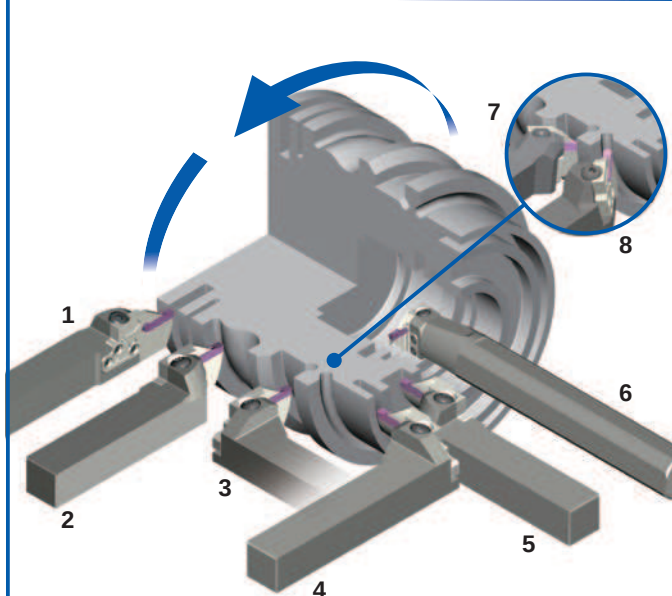

No.	Type	Angle	Hand	Page
1	External	00°	L	F018
2	External	00°	R	F018
3	External	90°	L	F032
4	Face	90°	R	F092

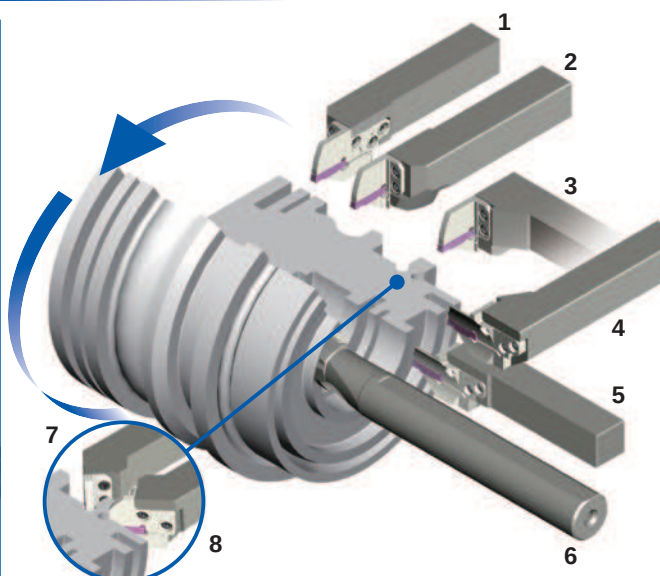


No.	Type	Angle	Hand	Page
5	Face	00°	L	F048
6	Internal	90°	R	F112
7	Recessing	50°	L	F038
8	Recessing	50°	R	F038


Normal use

Counter Clockwise

Reverse holder use

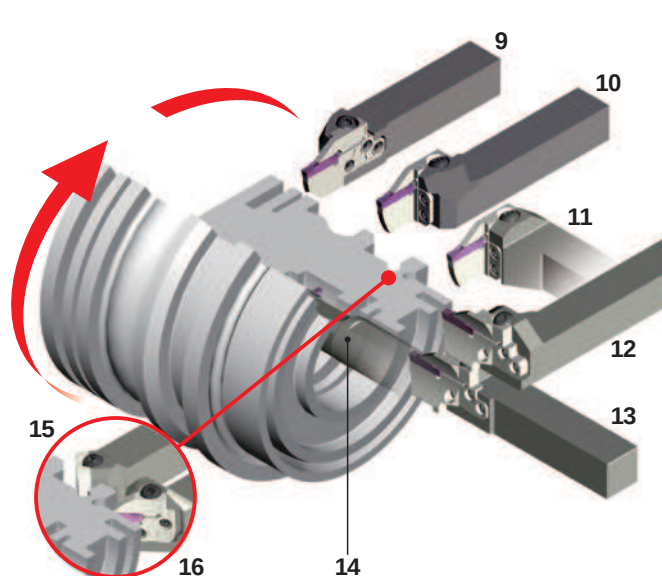

No.	Type	Angle	Hand	Page
9	External	00°	R	F018
10	External	00°	L	F018
11	External	90°	R	F032
12	Face	90°	L	F092

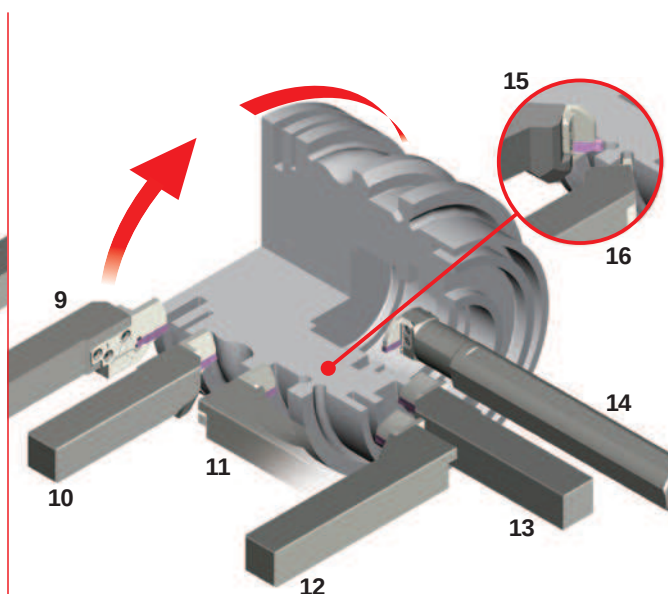

No.	Type	Angle	Hand	Page
13	Face	00°	R	F048
14	Internal	90°	L	F112
15	Recessing	50°	R	F038
16	Recessing	50°	L	F038