


SHANK TYPE

Right hand tool holder only.

Order Number	Stock	Number of Teeth	Dimensions (mm)					Max. Depth of Cut ap (mm)
	R		D1	D2	L1	D4	L2	
ASX445R503S32	★	3	50	63.0	125	32	40	6
634S32	★	4	63	75.9	125	32	40	6

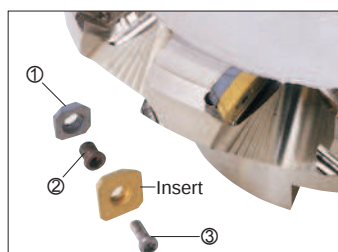

SPARE PARTS

Tool Holder Number	①	②	③		
	Shim	Shim Screw	Clamp Screw	Wrench (Insert)	Wrench (Shim)
ASX445	STASX445N	WCS503507H	TPS35	TIP15T	HKY35R

★ Clamp Torque (N • m) : WCS503507H=5.0, TPS35=3.5

Wrench	1. Wrench The ASX400 uses a TORXPLUS® clamp screw. The attached wrench is for the exclusive use of this screw. To ensure the effectiveness of TORXPLUS® only use the attached wrench. 2. Hexagonal wrench The attached hexagonal wrench is for use with the seat and the shim. The wrench size is 3.5mm.
Spare Parts	Only use the original parts that were supplied when purchased. If other parts are used the performance and safety can not be assured.